#### LAMD

# HES INSTALLATION MANUAL FOR HES3D-E160 CONCEALED HINGE

Thank you for selecting our product. Before starting installation, please read this manual thoroughly to ensure correct installation. Please keep this manual at hand for future reference.

### **ABOUT THE PRODUCT**

- This product is a concealed hinge for indoor use, that is recessed into the cut out on door and doorjamb.
- Three dimentional adjustment function allows vertical, horizontal, and depth adjustment.

### **DOOR SPECIFICATION**

Min. Door thickness	36 mm
Max. Door weight	55 kg per 2 hinges, 70 kg per 3 hinges
Max. Door size	Width: 900 mm, Height: 2400 mm

### COMPONENT PARTS (PER BOX)

Concealed hinge
 2 pcs

Screw cover 4 pcs x 2 bags

Template1 pc

· Countersunk head tapping screw

5×25 8 pcs x 2 bags

· Hex Key 4mm 1 pc

### FOR YOUR SAFE WORK AND CORRECT INSTALLATION

### Meaning of symbols








Required


### ⚠ Caution: If not followed, injury or damage may result.

- It is necessary to manufacture the frame with sufficient strength so that it endures the weight of the door and any impact upon opening/closing the door. Only use designated screws and ensure that they are fastened firmly. A frame with poor strength or loose screws might result in the door falling and causing injury.
- ODo not try to use this product for anything other than its original purpose. Do not use any part for applications outside of its specification.
- Ouse in conjunction with a door closer is not recommended. For soft-close option, we recommend Sugatsune LDD-V or LDD-S door damper.
- Make sure to follow the designated dimensions, specifications, and horizontal/vertical angles. Make sure that the frame is not warped, since it may affect the movement of the door.
- This product is a part for architectural fittings. After installation, make sure to test the finished product thoroughly to ensure that it is well-functioning and safe. Please inform the end user about general precautions and safety to prevent improper use.
- Make sure to check the screws for slack at regular intervals (one month from first usage, half a year, and then one time every year is recommended).

### **INSTALLATION DRAWING (EXAMPLE)**

### **CUT OUT DRAWING FOR DOOR AND DOORJAMB**

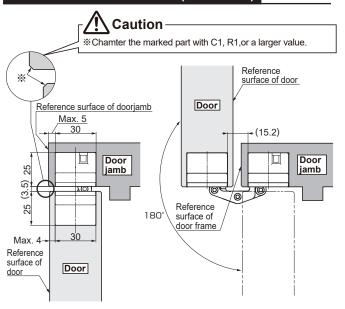


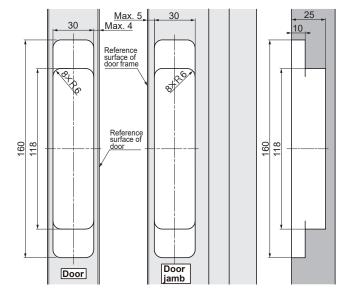





## 1 Disassembly of Hinge

## Installing Hinge to Door and Doorjamb

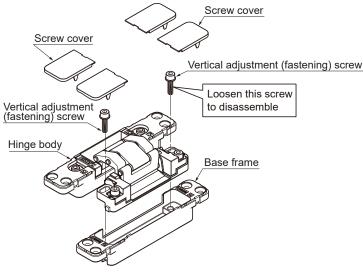


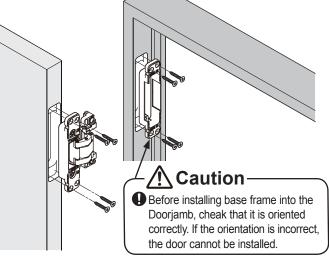

3 Hanging Door

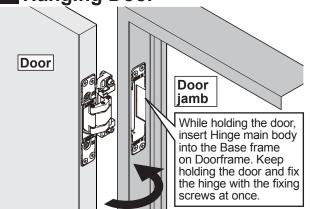


## 4 Fastening Removable Screws

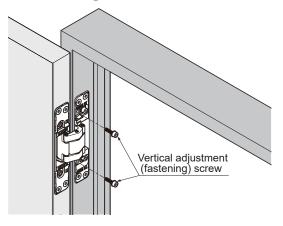

### ADJUSTING DOOR POSITION

The arrows should point in the direction of adjustment when the door is closed.

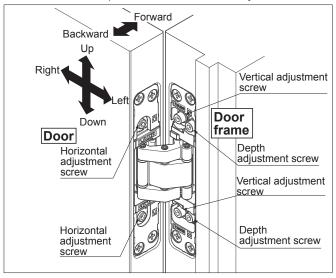

- When adjusting the vertical position or the depth, loosen the screws 360-degree, then hold the door at the suitable position and re-tighten the screws. Use wedges to support the door. (Tightening torque is 4.9 N·m.)
- When adjusting horizontal position, turn Horizontal adjustment screw. (There are two screws per hinge.)

The gap between Door and Frame will be expanded by turning the screw clockwise.

### Caution

- O Do not remove the depth adjustment screw. The door may fall and cause injury.
- When adjusting the horizontal position, turn the two screws a little, by the same amount. The hinge may be broken if you keep turning one
  - Horizontal adjustment range is +3 mm/-2 mm. When turning the screw to the right, if you move the part more than 2 mm, the cover cannot be put on, since the part protrudes. If you still turn the screw, the door will

#### SUGATSUNE EUROPE GmbH

Düsseldorf, GERMANY
Phone: +49 211 53812900 E-mail:sales@sugatsune.eu ISO9001(Japan Offices and Sugatsune America) and ISO14001(Chiba Production division and Logistics center), certified.

# 

E-mail:lamp@sugatsune.com.cn

### Guangzhou, CHINA

Phone: +86 20 6639 3552 E-mail:lamp@sugatsune.com.cn

Chicago, USA

Phone: +1 312 461 1081 E-mail:chicagoshowroom@sugatsune.com.

### SUGATSUNE KOGYO INDIA PRIVATE LIMITED Mumbai, INDIA Phone: +91 22 28314490/91 E-mail:sales@sugatsune.in

#### SUGATSUNE CANADA, INC.

Phone: +1 514 312 5267 E-mail:support@sugatsune.ca